



R15V00 14V ELECTRONIC ALTERNATOR CONTROLLER



Features:

- Voltage Regulation, Remote Voltage Sensed
- Low – Over Voltage Warning Light Output
- Over-Voltage Protection

Benefits:

- * Increased Regulator life. Reduced panel lights flicker
- * Warns the Pilot of Low & OV Conditions
- * Protects system loads against overexcited alternator

Voltage Regulation: 14.2V ± 0.2V. Max Field Current: 5A. OV: 16.0 ± 0.4V

The R15V00 alternator controller (ACU) combine the voltage regulator and over-voltage (OV) sensor functions in one unit. This ACU simplifies the system wiring while providing protection against OV fault.

The R15V00 wiring diagram shows the simplified diagram while the standard wiring diagram shows the use of separate OV Sensor and voltage regulator.

VOLTAGE REGULATION.


The Voltage Regulator, with Remote Voltage sense of the Alternator output, keeps the bus voltage constant by controlling the alternator’s field current: increasing it when the system load increases and decreasing it when the load drops.

OVER VOLTAGE (OV) PROTECTION. Built-in


The OV Protector (OVP) deactivates (turns off) the Voltage Regulator and the alternator if the bus voltage exceeds 16V to protect sensitive avionics equipment and the battery.

LOW & OVER VOLTAGE WARNING.

A warning light connected between pin I and the buss comes on to warn the pilot if the bus voltage exceeds the OV level or the alternator is off-line due because there is no voltage on pin S.

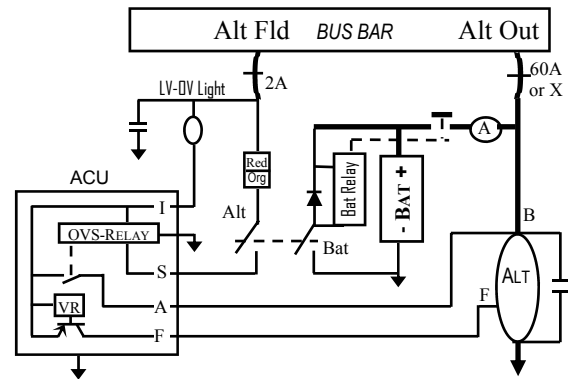

R15V00 Wiring Diagram
Combined OVS & Voltage Regulator

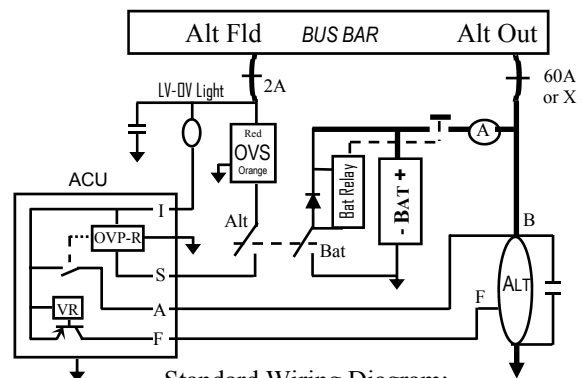

Standard Wiring Diagram:
Separate OVS & Voltage Regulator

The R15V00 replaces

- CESSNA P/N: C611001-0201, -0101, -0102 & OVS
- BEECH P/N 33-380010 & OVS
- ELECTRODELTA P/N VR600 & OS60
- PFT/LAMAR P/N: DGR6 & OVS
- FORD P/N: D4FF-10316-BA, CA. & OVS



R15V00

14V ELECTRONIC ALTERNATOR CONTROLLER

HOW THE SYSTEM WORKS

Closing the Bat switch applies the battery voltage to *pin A* of the alternator controller (ACU, regulator). With voltage at *pin A* (Alt switch off), the LV light comes on, indicating that the alternator is off-line.

Closing the Alt switch applies battery voltage to *pin S*. The internal Over Voltage Sensor's (OVS) output controls a relay inside the alternator controller. With power applied to *pin S*, that relay's normally open (NO) contacts connects *pin A* and *pin I*.


With power on *pin S*, current flows from the alternator's Bat terminal through the controller's voltage regulator to the alternator's field. The regulator keeps the bus voltage constant (around 14V) by controlling the alternator's field current. It increases the field current with increase in system load and decreases it, with a decrease in the system load.

Since the whole field current (max about 3.5 Amps) flows from the alternator's Bat terminal to pin A of the controller, abnormal increases in wire, connection, or junction resistances will cause poor voltage regulation and or fluctuating charge meter, panel lights, and bus voltage.

If the bus voltage exceeds about 16V, the Over Voltage Sensor (OVS) will open and thus remove power from *pin S*. Removing power from *pin S* will turn off the controller and take the alternator off line.

LV-OV Light

The LV-OV light on the instrument panel, tells the pilot the condition of the charging system. See the trouble-shooting section for how this function operates.

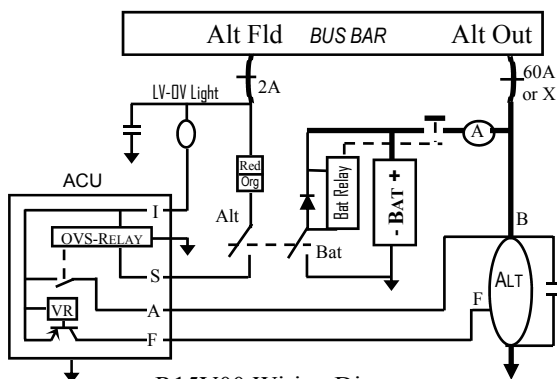

R15V00 Wiring Diagram
Combined OVS & Voltage Regulator

INSTALLATION INSTRUCTION

1. Disconnect and remove the present ACU/VR.
2. Measure the Alternator's Field Resistance between the field wire of airframe's VR connector and Ground. 3.5 to 6Ω is normal resistance. If is less than 3Ω or greater than 8Ω, check the alternator field or the field wire for problems. 0Ω means Fld-Gnd short.
3. Check the ALT switch resistance: 0.1Ω is normal.
4. Mount and connect the new ACU to the system.
 - Remove the OVS. Connect the wire from the field breaker to the wire from Alt switch.
5. Perform the Post Installation Test Procedure.

POST INSTALLATION TEST PROCEDURE

1. With the engine off, turn on the Alt & Bat switches, on the instrument panel, observe that the LV-OV light is off. Verify that the voltage drop across the alternator switch and 5 Amp circuit breaker is less than 0.2V.
2. Verify that the voltage drop from the alternator BAT terminal to pin A is less than 0.2V.
4. If the steps 1 to 3 are successful, perform steps 5 & 6.
5. Turn off all the avionics and any other voltage sensitive devices.
6. Start the engine, and at 1500 RPM measure a bus voltage of 13.9-14.4V. If the bus voltage exceed these limits, check for voltage drops from the alternator BAT terminal to pin A and wires/ connection from the ACU (F) to the alternator's field.

TROUBLE-SHOOTING THE SYSTEM

For help on how to solve problems in the system, see the Trouble-Shooting Notes (TSN) page and or TechCards.

INSTRUCTIONS FOR

CONTINUED AIRWORTHINESS MAINTENANCE

This device is not field repairable or serviceable. For all service, repair or overhaul needs, return it to ZEFTRONICS or a ZEFTRONICS approved repair station.

For all periodic inspection and test requirement, use the pre and post installation procedure listed above.

Contact us with tech support questions that are not addressed at www.zeftronics.com or in the TSN or TechCards.



TROUBLE-SHOOTING THE SYSTEM

14V Type B alternator system on Beech, Cessna, Grumman, Maule etc

Check the condition of the ACU

- With the master switch (Bat & Alt) on, at the ACU connector, measure the indicated voltages.

Pin I: _____ Pin A: _____ Pin S: _____
Pin F: _____ Bus _____

The voltages on pins I, A, S should equal bus'.

The voltage pin F should be 0.5-2V less than the bus'. If the pin I voltage is less than bus voltage, look for bad LV-OV light, broken wire from LV-OV light, grounded pin I or damaged controller. If the pin A voltage is less than bus', look for corrosion on the BAT terminal, socket for pin A on the airframe ACU connector, or wire (from ALT Bat to pin A) with high resistance. This may cause fluctuating charge meter or bus voltage, and may cause over-voltage and nuisance tripping (i.e. alternator dropping off-line).

If the pin S voltage is less than bus', look for a grounded pin S or damaged controller. Pin S to ground on the controller is about 400Ω.

If the pin F voltage is the same as the bus voltage, look for a damaged or un-grounded controller. If it is 0V, look for a grounded ALT field.

- If the Master switch is a split type, turn off the Alt Sw and measure the indicated voltages.

Pin I: _____ Pin A: _____ Pin S: _____
Pin F: _____ Bus _____

The voltages on pins I, S & F should be 0-2V, pin A should be battery or bus voltage.

If pin I has bus voltage on it, look for a short between pins A & I (internal or external to the controller).

Disconnect the controller, a resistance of 0-1K between pins A & I indicates a damaged controller.

Check the alternator Field & Power input wire

- Disconnect/Remove the connector on the ACU. Measure the resistance at the identified points.

Pin F to Gnd _____ Ω. FLD to Gnd _____ Ω
Pin A to ALT Bat _____ Ω

The normal Alt field resistance is 3-6Ω.

A lower or higher resistance may indicate problems with the alternator. Field resistance below 3Ω may indicate a short to ground, while higher than 6Ω dirty brushes or intermittently open field.

BETTER TROUBLE-SHOOTING TECHNIQUE


The most common trouble-shooting technique involves replacing suspected defective parts until problem goes away. That shot-gun method is a very expensive and often unsuccessful. Using a more systematic approach to trouble-shooting alerts the user or mechanic to the conditions of the field circuit breaker, alternator switch, alternator controller, and alternator's field. This approach to trouble-shooting looks at the condition of the pre-controller, controller, and post-controller components.

PRE-CONTROLLER CONDITION: Check the condition of the alternator switch, the field circuit breaker, or the wiring from the Alt Bat to pin A on the controller is open.

VOLTAGE REGULATOR CONDITION: Are the voltages on pins I, A, S and F according to the installation test data on page 4? If not, use the information on these 4 pages to solve the problem.

ALTERNATOR FIELD CONDITION: Are the field resistances measured from the airframe ACU connector and at the alternator according to the installation test data on page 4? If not, use the information on these 4 pages to solve the problem

Most electrical charging system problems are easily solved by applying the systematic trouble-shooting approach with a good understanding of Ohm's law and basic electricity.

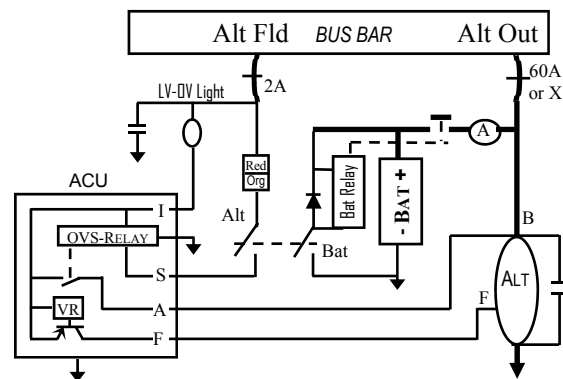

R15V00 Wiring Diagram
Combined OVS & Voltage Regulator

In this **Type B** system: the Controller is between the Bus and the Alt field. To control the bus voltage, the unit switches power to the field several times a second. The OVP opens when OV occurs.



Frequently Asked Questions & TECHCARD Notes

14V Type B alternator system on Beech, Cessna, Grumman, Maule, etc

TROUBLE-SHOOTING THE SYSTEM

Flickering / oscillating ammeter and panel lights.

Check the connections between the Alternator Bat terminal and the pin A input to the controller for high resistance, corrosion, dirt, loose or intermittent connection..

No voltage regulation

With the engine off and the Master switch on. Pins I, A, and S should measure Battery voltage, pin F should be 0.5 to 2V less the bus voltage.

- If the measured voltage is different, see The voltages on pins I, A, S should equal bus' on page 3 for probable causes for the problem.
- If the pin F voltage is the same as the bus voltage, look for and correct open circuit or high resistance in the alternator's field or the wire between the field and pin F. The controller might not be properly grounded.
- If the pin F voltage is 0V and pins I, A, S have battery voltage, look for a grounded alternator field or field wire. If the field resistance is correct as shown in step 5 of the installation tests, send the ACU in for test/repair. If there is a field ground fault, repair it or replace the defective alternator. If the pin F voltage is correct, verify that the field resistance and the condition of the connections and wires between the ACU and the field are good.

Bus voltage remains at battery voltage (about 12V)

To solve this problem, see No voltage regulation.

Alternator carries only about half its rated output.

Look for an open stator wire or open diode in the alternator. Check the shunts and alternator output wires indicating an alternator that is current limiting.

Bus voltage drops with load increase

To solve this problem, see Alternator carries only about half its rated output and or the condition of the wire/connections between pin A and the alternator Bat terminal.

LV-OV light does not work, everything else works

Disconnect the ACU/Regulator. Turn on the Bat switch. On the airframe ACU connector ground pin I. The light should illuminate. If it does not, the lamp is defective or the wires to or from it are broken

OUR GOAL IS TO HELP YOUR SYSTEM OPERATE BETTER
AND HELP YOU BETTER UNDERSTAND ITS OPERATION.

INSTALLATION TESTS. BEFORE INSTALLING THIS UNIT, PERFORM TESTS:

1. Read pages 1 to 3 and this page.
2. Check for and replace open, frayed, or broken wires. Clean thoroughly or replace corroded, dirty, or oxidized connections, terminals, contact, or poorly soldered wire junction.
3. Check for Open or Ground-shortened alternator field. Most 12V alternators have 3-6Ω field resistance. Ground shorted alternator field will damage most Voltage Regulators/ACU. Repair or replace an alternator has a field to ground short, do not connect the ACU to it.
4. With the engine off: Check voltage drops across the Field, Alt switch, Alt field circuit breaker and ACU. High voltage-drop means excessive junction resistance and will lead to many problems like: fluctuation ammeters, charge-meters and panel lights.

5. Perform and record the following tests with the **Master Switch Off:**

	12V Values	Typical Values
A. Field resistance at ALT	_____ Ω	3 – 6Ω
B. Field resistance at ACU	_____ Ω	3 – 6Ω
C. Field SW/C-BKR resistance	_____ Ω	0 – 0.1Ω
D. ALT Bat to Pin A resistance	_____ Ω	0 – 0.05Ω
E. ALT Out C/BKR resistance	_____ Ω	0 – 0.05Ω

6. Perform and record the following tests with the **Master Switch On:**


Engine Off	Bat Switch on	Alt Switch on	Typical Values
A. Bus Voltage _____ V	_____ V	_____ V	12 – 13V
D. Pin I Voltage _____ V	_____ V	_____ V	12 – 13V
E. Pin A Voltage _____ V	_____ V	_____ V	12 – 13V
F. Pin S Voltage _____ V	_____ V	_____ V	12 – 13V
F. Field Voltage _____ V	_____ V	_____ V	0.5-2V <VBUS

7. **Post Installation.** If all tests are correct to or per steps 5 & 6, run the engine and record:

	12V System	Typical value
A. Bus voltage _____ V	_____ V	13.8 – 14.3V

For tech help & other TechCards,
call: 903-758-6661

ZEFTRONICS
Electrical Charging System Solutions

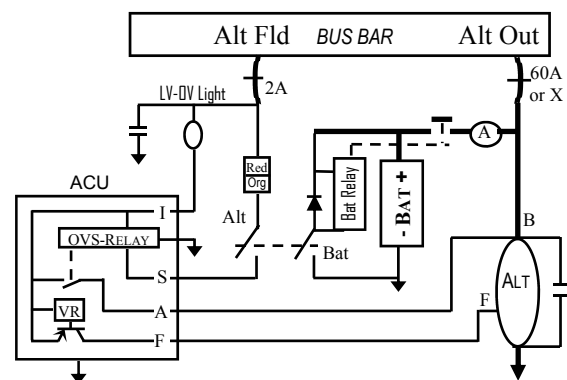

In this **Type B** system: the ACU is between the BUS and the Alt field. To control the bus voltage, the unit switches power to the field several times a second. The OVP opens when OV occurs.